

APPLE II
SERIAL INTERFACE CARD (A2L0008)
INSTALLATION AND OPERATING MANUAL

**SERIAL INTERFACE MANUAL
INSTALLATION AND OPERATING MANUAL**

TABLE OF CONTENTS

SECTION	TITLE	PAGE
	INTRODUCTION	
I	INSTALLATION	3
	Installing the Serial Interface	
	Compatibility with External Devices	
	RS232 Connector Usage	
	Current-Loop Operation with a Teletype	
II	OPERATION	9
	Using the Serial Interface	
	Preliminary Discussion of IN# and PR#	
	Sending Output and Receiving Input	
III	DEFAULT PARAMETERS AND THE DIP SWITCH	15
	Initialization	
	Operating Parameters	
	Setting the DIP Switch Defaults	
	Permanent Defaults	
IV	ACCESS TO OPERATING PARAMETERS	19
	Description of Serial Interface Operation	
	Transmission Data Sequence	
	Lower-Case Characters	
	Changing Interface Parameters through	
	Software Commands	
V	DIRECT USE OF THE INTERFACE	27
	Transmitting a Character without Using PR#1	
	Batch Moves	
VI	APPENDIX: SERIAL INTERFACE TIMING	31
	Table of Baud Rate Quantum Numbers	
	Circuit Diagram	
	Assembly Listing	

APPLE II SERIAL INTERFACE CARD

INTRODUCTION

These are the fundamental abilities of the APPLE Serial Interface, using the nearly universal RS232 standard:


1. Output from the APPLE II can be sent to a serial printer or other external serial device, to the APPLE's TV screen, or to both. The Serial Interface can supply the necessary line-feeds with carriage-returns, etc.
2. Input for the APPLE II can be taken either from an external device or from the APPLE's keyboard, or from both simultaneously.
3. The APPLE II can handle half-duplex communications at rates from 75 to 19,200 baud, in both directions, with a printer, another APPLE, a terminal, modem or other RS232 external device.
4. The Serial Interface can also be connected for current-loop operation with a Teletype.

While this document is intended primarily for APPLE users who are familiar with the RS232 interface, many of the terms and concepts will be explained.

I INSTALLATION


HOW TO INSTALL THE SERIAL INTERFACE

The Serial Interface consists of three parts: the Interface printed-circuit card itself, a female DB-25 connector, and a flat ribbon cable between them.

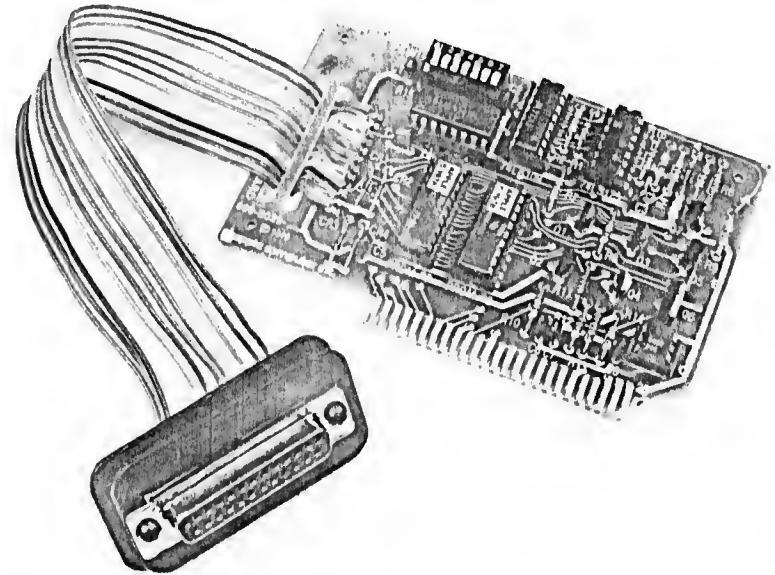

To install the Serial Interface, you will simply plug the Interface card into a socket inside the APPLE II, and then tighten a clamp to hold the DB-25 connector in place, as follows:

1. **Turn off the power switch** on the back of the APPLE II. This is important to prevent damage to the computer.
2. Remove the cover from the APPLE II. This is done by pulling up on the cover at the rear edge (the edge farthest from the keyboard) until the two corner fasteners pop apart. Do not continue to lift the rear edge, but slide the cover backward until it comes free.
3. Inside the APPLE II, across the rear of the circuit board, there is a row of eight long, narrow sockets called "slots." The leftmost one (looking at the computer from the keyboard end) is slot #0, and the rightmost one is slot #7. Insert the "fingers" portion of the Serial Interface card into slot #1, the *second* socket from the left. The "fingers" portion will enter the socket with some friction and will then seat firmly. The Interface card may be placed in any slot except slot #0, the leftmost. However, APPLE's stan-

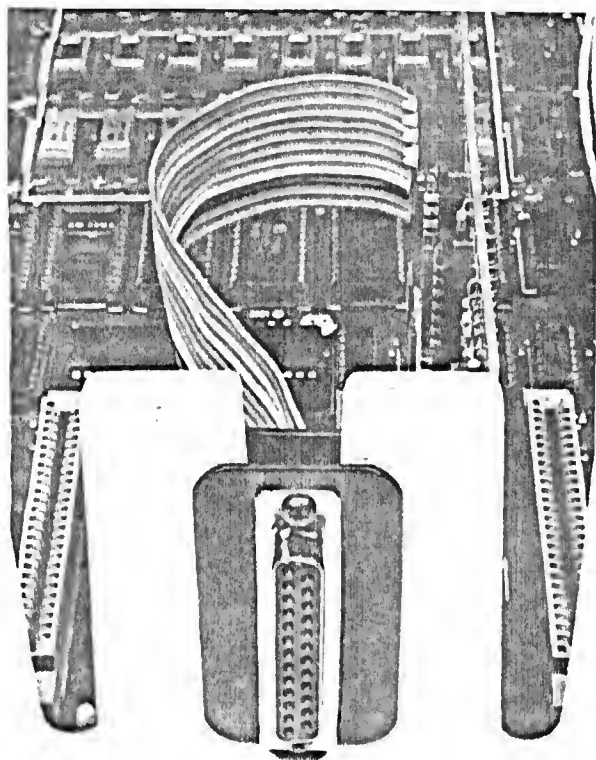

dard location for printer interfaces is slot #1 (the second from the left). This manual and most APPLE software for the Serial Interface are written assuming you have installed the Serial Interface card in slot #1.

4. Slip the DB-25 connector and its two metal plates as far down as possible into one of the three long vertical openings in the back of the APPLE II case. One plate goes on the inside of the case; the other plate goes on the outside of the case with the connector's flange on the outside of this plate. Any of the three large vertical openings may be used, but it is customary to use the middle one. Notice that the connector is not symmetrical. When seen from the back of the APPLE II, the longer side of the connector should be on the left (although it will work in either position).
5. Tighten the screws on the DB-25 connector just until the connector assembly can no longer be moved in the opening. Excessive tightening will cause the metal plates to bend.
6. Replace the cover of the APPLE II, remembering to start by sliding the front edge of the cover into position. Press down on the two rear corners until they pop into place.
7. The Serial Interface is installed, and the APPLE II may now be turned on.

COMPATIBILITY WITH EXTERNAL DEVICES

For communications between computers and computer-related equipment, the most widespread and universal standard is the RS232 standard. The RS232 standard specifies the electrical parameters, the form of the signals, and even the type of connector to be used in an interface. The APPLE Serial Interface complies with this standard.

The RS232 standard allows for a number of different communication speeds. These speeds are measured in terms of a unit called the "baud." Each multiple of 10 baud is equal to about 1 character sent or received per second; 300 baud is roughly equal to 30 characters per second. The Serial Interface can operate at any of 256 different speeds, from 75 baud to 19,200 baud.

Computers and their related devices do not actually send the keyboard characters themselves, of course. Each character is encoded in the form of electrical signals, and it is these electrical signals which are sent and received.

The APPLE Serial Interface can communicate with any device that specifies RS232 operation between 75 and 19,200 baud. Many devices can operate at a number of speeds. Very often a set of switches or a rotary dial selects the baud rate. These external devices should be set to a particular baud rate before being connected to the APPLE. The highest baud rate available is usually preferred. The Serial Interface should be set for the same baud rate, using the first 3 levers of the Serial Interface's DIP switch (this is explained in the section, SERIAL INTERFACE OPERATING PARAMETERS). All common baud rates are listed in the section, SERIAL INTERFACE TIMING.

While such operation does not conform to the RS232 standard, the APPLE Serial Interface can also be operated in the current-loop mode necessary to communicate with a serial teleprinter such as the Teletype Model 33ASR.

RS232 CONNECTOR USAGE

The standard DB-25 connector, which is supplied with the Serial Interface, has 25 pins. Six of these are connected internally to the APPLE Serial Interface, but for most applications only three of them need be used. If you don't have a ready-made cable that can go from the Interface's DB-25 connector to the external device, then you will have to wire an interconnecting cable. A cable is just a number of electrically distinct wires that physically run alongside each other. When you wire the cable, you will have to refer to the DB-25 connector's pin numbers. These numbers are molded into the connector, although sometimes they are almost vanishingly small.

The following list describes the functions of the active pins on the Serial Interface connector. The other pins may be left unconnected.

PINS 4 & 5 These pins have been wired together (jumped) at the Serial Interface card. No connection need be made to these pins.

PINS 6, 8 & 20 These pins have been wired together (jumped) at the Serial Interface card. No connection need be made to these pins.

PIN 7 This is called "signal ground." It should be wired to pin 7 at the other end of the cable. If there is no connector at the other end of the cable, then the Serial Interface's pin 7 should be wired to a signal ground connection on the external device. (If this is insufficient information, any additional data would have to be supplied by the manufacturer or designer of the external device.)

PIN 2 The characters from the external device arrive at the computer via this pin.


PIN 3 The characters leaving the computer, on their way to the external device, exit via this pin.

Pins 2 and 3 have been left for last since, if the external device end of the cable is another 25 pin connector, there are two ways that they might be wired. No damage is caused by wiring these pins the wrong way, but characters will not be sent out or received.

A. If the external device is a terminal or printer with an RS232 interface itself, then pin 2 on the APPLE's end of the cable should be wired to pin 2 at the external device's end of the cable. Similarly, pin 3 on the APPLE's end of the cable should be wired to pin 3 at the external device's end of the cable. Most of these devices, like the APPLE Serial Interface, also have a **female** DB-25 connector. Therefore your cable will (most likely) need to have a **male** DB-25 connector at *each* end.

B. If the external device is a modem, or another computer with a standard serial interface, then *its* interface will send characters out via pin 3 and receive characters via pin 2 just as the APPLE Serial Interface does. Therefore, you must wire pin 2 at the APPLE's end of the cable to pin 3 at the modem end of the cable; and wire pin 3 at the APPLE's end of the cable to

pin 2 at the modem end of the cable. Modems usually have a **male** DB-25 connector. Therefore, you will probably need a cable with a **female** DB-25 connector at the modem end, and a **male** DB-25 connector at the APPLE end.

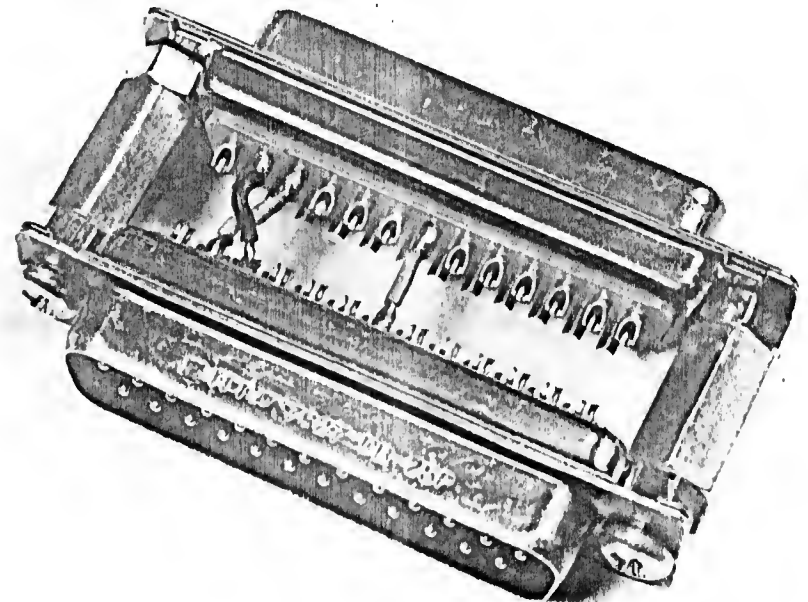

Note that only the wires to pins 2 and 3 are involved. No other wires need be changed, no matter what external RS232 device is connected to the APPLE Serial Interface.

Most commercially prepared cables are simply extension cables: they connect identically numbered pins at the two ends of the cable. For use with a modem, you may have to re-wire the cable, interchanging the wires to pins 2 and 3 at one end. If you would rather not tamper with a ready-made cable, you can make an adapter with a male DB-25 connector at one end and a female DB-25 connector at the other end. It should be wired with pins 7 connected, and pins 2 and 3 cross-connected. This adapter, when connected between the APPLE's Serial Interface and a standard RS232 cable, allows the Interface to "talk" to most modems.


CURRENT-LOOP OPERATION WITH A TELETYPE

If you wish to use the APPLE Serial Interface to communicate with a current-loop teleprinter such as the Teletype Model 33ASR, you will be interested in three other Interface pins.

PIN 13 In current-loop operation, the characters from the Teletype arrive at the APPLE via this pin. This pin should be wired to terminal 3 on the Teletype Model 33's barrier strip.

PIN 12 The return path of the input current loop (the loop for characters arriving from the Teletype) should be connected to this pin. (In fact, the Serial Interface does not care which way current flows through this input loop. We have arbitrarily chosen pin 13 as the input and pin 12 as the return, but the roles of these two pins can be interchanged.) We suggest using signal ground (at pin 7) for the return path, in which case you should connect pin 12 to pin 7.

PIN 23 In current-loop operation, the characters leaving the APPLE, on their way to the Teletype, exit via this pin. Wire this pin to terminal 7 on the Teletype Model 33's barrier strip. The return path for this output current loop is also the signal ground at pin 7. For half-duplex operation, connect terminals 4 and 6 on the Teletype Model 33's barrier strip.

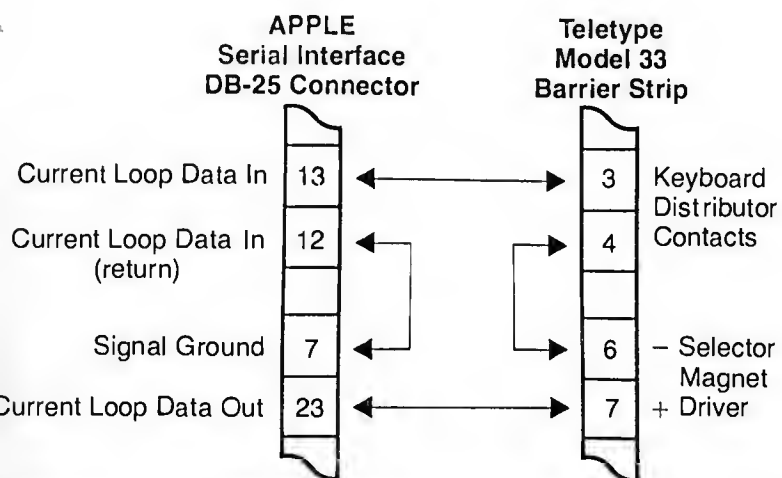

Caution! Pins 1 and 2 on the Model 33 barrier strip are connected to 120 Volts AC.

II OPERATION

USING THE APPLE SERIAL INTERFACE

The Serial Interface allows the APPLE II to communicate with other electronic devices which are *external* to the computer. These devices may be—to give a few examples—terminals, printers, or other computers. The Serial Interface can be controlled through BASIC programs or through assembly-language programs. It can also be controlled directly, by typing a few characters on the APPLE's keyboard.

In the following discussion, it will be assumed that you are familiar with the APPLE II BASIC Programming Manual, and that your APPLE II is operating in BASIC, with the Serial Interface installed in slot #1.

Here is a list of the most common tasks the Serial Interface is called upon to do, and the commands that accomplish them.

1. Send subsequent output to the Serial Interface.

PR#1

2. Cancel the effect of PR#1, sending output only to APPLE's TV screen.

PR#0

3. Accept subsequent input from the Serial Interface, as well as from the APPLE's keyboard.

IN#1

4. Force the APPLE to convert all lower-case characters to upper-case, as they arrive from the external device.



(type the key, then type)

5. Allow the APPLE to accept lower-case characters that arrive from the external device. If displayed on APPLE's TV screen, the lower-case characters will appear as upper-case characters in inverse video.



These tasks are more fully explained, and some fine points considered, in the next few pages.

To understand exactly how the Serial Interface operates, it is useful to think of the APPLE II as divided into three parts:

1. The APPLE's keyboard, which **generates** characters (when you type on it).
2. The APPLE's TV screen, which can **absorb** characters (and make them visible).
3. The APPLE's processor, or "brain," which can **control** the flow of characters, and act upon them.

You can also think of any external device as being able to **generate** characters or **absorb** characters, or both. The external device may or may not have a "brain," but this is not important in understanding the operation of the Serial Interface.

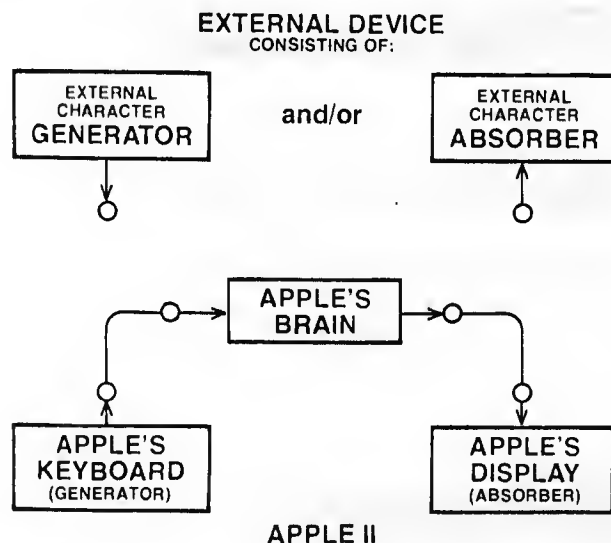


FIGURE 1

Figure 1 shows the three parts of the APPLE II, and the only parts of any external device that affect the Serial Interface. It also shows the normal interconnection between these parts. When the APPLE II is first turned on, it will ignore the external world, listening only to its own keyboard and displaying characters only on its own TV screen.

PRELIMINARY DISCUSSION OF THE IN# AND PR# COMMANDS

There are eight sockets, called "slots," on the back of the main circuit board inside the APPLE II. The leftmost one (as viewed from the keyboard end of the computer) is slot #0, and the rightmost one is slot #7. (See the section, HOW TO INSTALL THE SERIAL INTERFACE.) APPLE BASIC has two commands for selecting among these slots for input and output. In effect, when you first invoke BASIC, the commands

IN#0
and
PR#0
are automatically executed. The first of these commands, **IN#0**, tells the APPLE to

Take **IN**put from the APPLE keyboard.
And the second command, **PR#0**, instructs the APPLE to

Send **PR**inting to the APPLE's TV screen.
This is the "normal," or APPLE-alone condition shown in Figure 1. Now, however, if the command (or program statement)

IN#1

is executed, the APPLE will henceforth take its input from whatever is plugged into slot #1. Similarly, if the command

PR#1

is executed, all output will be sent to whatever is plugged into slot #1. If there is nothing plugged into the specified slot, then the system may hang, or your program may be erased, or other strange behavior may result. Notice that slot #0 is special, and refers to the APPLE itself.

SENDING YOUR OUTPUT TO AN EXTERNAL DEVICE AND RECEIVING INPUT FROM AN EXTERNAL DEVICE

In the following examples, the commands

PR#1

and

IN#1

will be typed on the APPLE's keyboard. If you have put your Serial Interface into slot #1 (the second one from the left, as described in the section, HOW TO INSTALL THE SERIAL INTERFACE) the commands will work exactly as shown. If you use some other slot, you will have to substitute the number of that slot. **Slot #0 may not be used for the Serial Interface.**

Attach an appropriate cable (see the section, RS232 CONNECTOR USAGE) from the DB-25 connector of the Serial Interface to the external device with which you wish to communicate. Reset your APPLE II by pressing the

CTRL CTRL

RESET key, and invoke BASIC typing a **B** (**B** means depressing the **B** key while simultaneously holding down the key marked **CTRL**). If you are not familiar with this procedure, see your APPLE II BASIC Programming Manual. When the prompt character appears, type the command

PR#1

(and press the **RETURN** key, of course). From now on, any characters you type will be sent out through the Serial Interface to the external device. The characters will appear on the APPLE's TV screen only if levers 5 and 6 of the Serial Interface's DIP switch (located directly on the Interface card itself, near its upper edge) are **ON** when **PR#1** is typed. (This is more fully explained in the section, SERIAL INTERFACE OPERATING PARAMETERS.) Characters coming in from the external device will be ignored. The operation of the system after you type **PR#1** is shown in Figure 2.

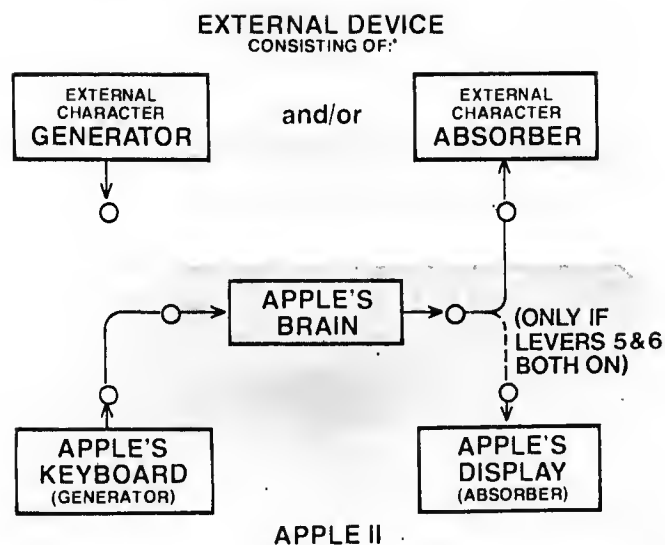


FIGURE 2

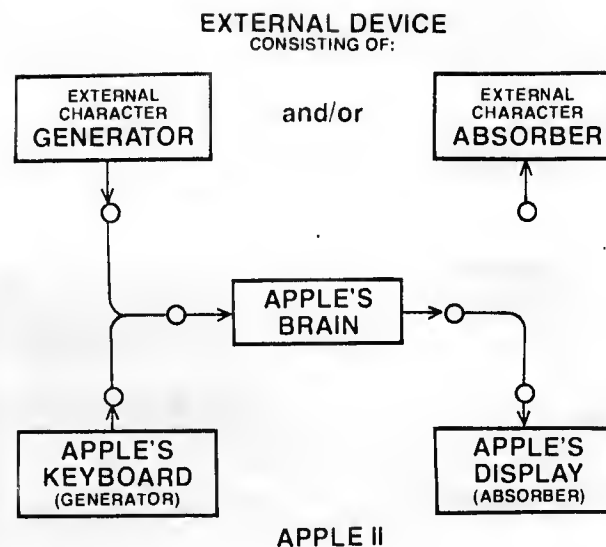


FIGURE 3

Operation of the system after executing PR#1

Operation of the system after executing IN#1

The APPLE's "brain" is still connected, and the command **PR#0** will restore normal (Figure 1) operation, in which the APPLE's output characters are not sent through the Serial Interface. Normal operation can also be

Normal operation is restored if the command **IN#0** is typed on the APPLE's keyboard. Normal operation is also restored if the external device sends the command **IN#0**

restored by pressing the **RESET** key and then typing a **CTRL C**, but this option is not available if the Interface is being controlled by a program.

Pressing the **RESET** key and typing a **CTRL C** on the APPLE's keyboard will also restore normal operation; but this cannot be done from a program, and will not be mentioned again.

To let the external source of characters control the APPLE II, use the command **IN#1**. After this command, the APPLE will accept input from the external device connected to the Serial Interface, as well as from its own keyboard. Figure 3 shows this condition. If there is no external device connected to the Serial

Typing both commands, **PR#1** and **IN#1** will give the external device full control of the APPLE II. In this "remote mode" (shown in Figure 4), a friend could use your APPLE from across the country—or across the room.

Interface, the system will "hang" after this command. Use **RESET CTRL C** to recover.

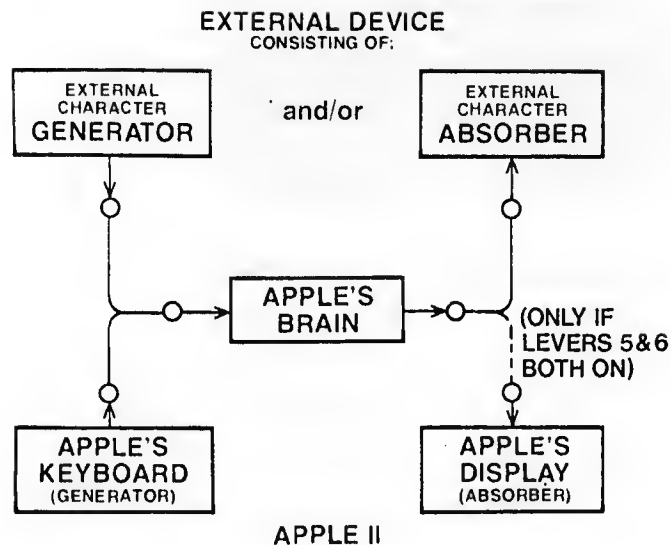




FIGURE 4

Remote Mode: operation of the system after executing PR#1 and IN#1.

III DEFAULT PARAMETERS AND THE DIP SWITCH

INITIALIZING THE SERIAL INTERFACE

Before the Serial Interface can be used, it must be **initialized**. Initializing the Interface sets all of the Interface operating parameters to their **default** values. Assuming slot #1, the Interface is initialized each time either of the following BASIC commands is typed:

PR#1  or IN#1 

and each time any of the following Monitor commands are typed:

    or     or C100G 

When used within a *program*, a command (such as PR#1) that transfers APPLE's output to the Serial Interface does *not* initialize the Interface until the first character is actually sent out (with a PRINT statement, for instance). Similarly, if during a *program* a command (such as IN#1) tells the APPLE to get its input from the Serial Interface, the Interface is *not* initialized until the APPLE actually looks for its first input character (in an INPUT statement, for instance).


SERIAL INTERFACE OPERATING PARAMETERS

The Serial Interface has ten user-definable operating parameters. Each time the Serial Interface is initialized, the ten operating parameters are given their **default** values. Five of the default values are determined by the 7 levers of the Serial Interface's **DIP** switch (located on the Interface's printed-circuit card, near the upper edge). The **DIP** switch levers set the default values for these five operating parameters: **Baud Rate** (levers 1, 2 and 3), **Carriage Return Delay** (lever 4), **Line Width plus APPLE Video** (levers 5 and 6), and **Line Feed** (lever 7). Changing the settings of the **DIP** switch levers *after* initialization has no effect until the *next* initialization.

SETTING THE DIP SWITCH DEFAULTS

1) Baud Rate


DIP Switch Levers			Default Baud Rate	
1	2	3		
On	On	On	=	110 baud
Off	On	On	=	134.5 baud
On	Off	On	=	300 baud
Off	Off	On	=	1200 baud
On	On	Off	=	2400 baud
Off	On	Off	=	4800 baud
On	Off	Off	=	9600 baud
Off	Off	Off	=	19200 baud

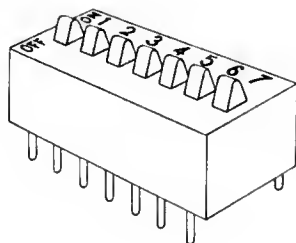

On initialization, the settings of **DIP** switch levers 1, 2 and 3 determine the rate at which bits may be transmitted to the external device. 300 baud is 300 bits per second. Under default conditions, each character is transmitted using 11 bits (1 start bit, 8 data bits, and 2 stop bits).

2) Carriage Return Delay


DIP Switch Lever	Default Car. Return Delay
4	
On	= Disabled
Off	= Enabled

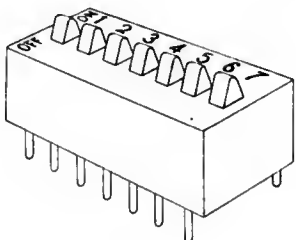

If **DIP** switch lever 4 is Off (Delay Enabled), the Serial Interface will wait briefly (approximately 1/4 second) after transmitting a carriage return, to allow the printer to complete this movement. If you are transmitting to an external TV screen, this delay is probably unnecessary, and lever 4 may be turned On (Delay Disabled).

3) Line Width plus APPLE Video


DIP Switch Levers		Default Line Width	Default APPLE Video
5	6		
On	On	= 40 Char/Line	Enabled
Off	On	= 72 Char/Line	Disabled
On	Off	= 80 Char/Line	Disabled
Off	Off	= 132 Char/Line	Disabled

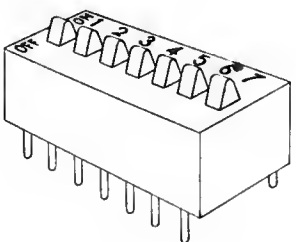

After a carriage return, the settings of **DIP** switch levers 5 and 6 determine the maximum number of characters transmitted before the Serial Interface will force another carriage return to be sent out. Characters will be displayed on the APPLE's TV screen only if the default line width is set to 40 characters per line (levers 5 and 6 On). After initialization, the line width can be changed from 40 characters per line, but the display on the APPLE's TV screen will not correspond to the display on the external device, as transmitted carriage returns are not accompanied on the APPLE's TV screen by line feeds.

4) Line Feed

DIP Switch Lever	Default Line Feed
7	
On	= Disabled
Off	= Enabled

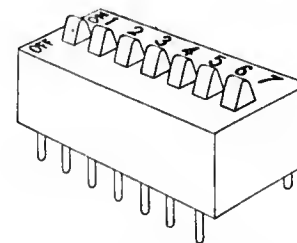

If **DIP** switch lever seven is Off (Line Feed Enabled), the Serial Interface will transmit a line feed after each carriage return it transmits. If the external device automatically supplies its own line feed after each carriage return received, you can set lever seven to On (Line Feed Disabled) to avoid double-spacing.

PERMANENT DEFAULTS

During each initialization, the five remaining operating parameters are set to their **permanent** default values:

1. **Parity** defaults to its disabled condition (no parity bit).
2. **Checksum** defaults to its disabled condition (no checksum character).
3. **Lower-Case** defaults to its disabled condition (converts all incoming lower-case characters to upper-case).
4. **Number of Data Bits** defaults to 9 (8 data bits plus one start bit).
5. **Number of Stop Bits** defaults to 2.

These parameters will be explained in the following section; they can only be changed by software commands *after* initialization.

IV ACCESS TO OPERATION PARAMETERS

DESCRIPTION OF SERIAL INTERFACE OPERATION

For most applications, the default operating parameters (both those that are fixed and those that can be set with the DIP switch) will be just what you need: your parameters will be set each time the Interface is initialized. In that case, the following section will be interesting but not necessary. However, the Serial Interface is designed to be very flexible, so that its operating parameters can be easily modified for use in a wide variety of special applications. This section gives a rather detailed description of the Serial Interface's operation. The following section shows you how to make any of the many possible modifications to that operation, should they be necessary.

Each character that is sent out through the Serial Interface is transmitted as a series of bits, in the following sequence:

1. One "Start Bit," a "low" voltage which tells the external device that a character is going to be transmitted.
2. From two to eight "Data Bits" (default is eight bits; can be changed by the user), a sequence of "high" and "low" voltages that represent the actual character code being transmitted. The default is eight bits because the APPLE normally handles data in eight-bit groups. If your external device sends and receives data in groups of fewer than eight bits, you must set the Serial Interface to send and receive these smaller groups.
3. If enabled, one "Parity Bit" (default is no parity bit; even or odd parity can be enabled by the user). This is a transmission-accuracy checking bit which the external device looks at for errors and then discards.

The parity bit is found as follows: all the 1-bits in the actual character code are added together, and the result's evenness or oddness is compared with the type of parity-checking selected. For instance, the binary ASCII code for the letter S is 1010011; the sum of the 1-bits is 4, an even number. If *Even* parity has been enabled, the comparison is *true*, and a 0-bit is sent at the end of the character. If *Odd* parity has been enabled, the comparison is *false*, and a 1-bit is sent. If parity has not been enabled, no extra bit is sent. Check your device's operation manual to see if it sends and receives parity bits.

4. From one to 127 "Stop Bits" (default is two bits; can be changed by the user), a "high" voltage which tells the external device that a character has been completely transmitted. Each external device requires a particular number of stop bits after every character; see the device's operation manual.

This same sequence will be used by the external device when it transmits to the APPLE. Timing is very important to correct transmission and reception. The Serial Interface sends out and receives bits at fixed intervals of time set by the "Baud Rate" (default is set by DIP switch levers 1, 2 and 3; can be

changed by the user). The Serial Interface and the external device *must* be set to the same baud rate and parity option, in order to interpret the sequence of "high" and "low" voltages correctly. The same is true when the external device is transmitting characters to the APPLE Serial Interface.

When the Serial Interface has sent out the number of characters set by the "Line Width" (default is set by DIP levers 5 and 6; can be changed by the user), it transmits a "Carriage Return" to the external device. After sending a carriage return, it may wait during a fixed ¼-second "Carriage Return Delay" (if enabled: default set by DIP lever 4; can be changed by the user) before sending the next character, to allow the printer to complete this movement. Then the Interface may send a "Line Feed" (if enabled: default set by DIP lever 7; can be changed by the user), so that subsequent characters will appear on the following line.

Finally, each time it completes sending 256 characters in a "Batch Move," the Serial Interface may send a "Checksum" character (default is no checksum character; can be changed by the user). This is a transmission-accuracy checking character which the external device looks at for errors and then discards. The checksum character is found by XORing the previous 256 characters, as follows: the second character is XORed with the first, the third with that result, the fourth with *that* result, and so on. Check your device's operation manual to see if it sends and receives checksum characters. During Batch Moves, the Serial Interface and the external device must be set to the same checksum option.

LOWER-CASE CHARACTERS

While the APPLE generates and displays characters only in upper case capital letters), your external device may generate both upper-case and lower-case characters. When lower-case characters are received by the APPLE through the Serial Interface, they can be treated in two different ways:

1. Convert all incoming lower-case characters to upper-case characters (incoming upper-case characters are not affected). Since this is the usual APPLE mode, any incoming characters displayed on the APPLE's TV screen will look fine. This is the permanent default condition; but it can be changed by the user, after initialization.
2. Accept all incoming lower-case characters as lower-case (again, incoming upper-case characters are not affected). APPLE's TV screen *display* of characters is designed for upper-case only, so any display of incoming lower-case characters will look strange. If the characters are being displayed as they arrive from the external device, APPLE will show the lower-case characters as upper-case characters in *inverse video* (black letters on a white background). Once stored in APPLE's memory, lower-

case characters will be displayed (when LISTed, for instance) as a strange assortment of upper-case characters in normal (white on black) video. There is one exception to this: if the stored lower-case characters are being displayed as they are sent out through the Serial Interface, they will again appear as upper-case characters in inverse video. Note that these peculiar *displays* do not reflect the lower-case characters themselves: in this mode they are *stored* correctly in APPLE's memory, and may be printed correctly on any appropriate external device. Note also that this mode does not add any capability to *generate* lower-case characters from the APPLE keyboard.

CHANGING SERIAL INTERFACE PARAMETERS THROUGH SOFTWARE COMMANDS

Ten of the Serial Interface parameters can be changed from their initialized (default) values, through the use of commands in machine language or BASIC. Once an Interface parameter is set by a software command, that parameter remains unchanged until the Serial Interface is reinitialized or the parameter is reset by another software command. For more discussion of the various parameters functions, see the previous section.

In the following descriptions, the letter "s" refers to the number of the printed-circuit board slot inside the APPLE, in which the Serial Interface card is installed (see the section, HOW TO INSTALL THE SERIAL INTERFACE).

1. BAUD RATE (assembly-listing variable: BRATE)

Memory location 1144+s (\$478+s, in Hexadecimal) contains APPLE's baud "quantum" number, which specifies how many "quanta" the APPLE is to wait between sending out bits through the Serial Interface. One quantum equals 53 APPLE II cycles (51.94 microseconds) per transmitted bit. The default value is set with levers 1, 2 and 3 of the Interface card's DIP switch (see the section, SETTING THE DIP SWITCH DEFAULTS). From BASIC, to change the baud rate from the default value to B use the command

POKE 1144+s, r

where r is the integer, from 0 through 255, that is closest to $1/((.00005194 * B))$

For further information, see the section SERIAL CARD TIMING.

2. STOP BITS (assembly-listing variable: STBITS)

Memory location 1272+s (\$4F8+s, in hexadecimal) contains the Number of Stop Bits (Note: the one parity bit is *included* in this number, if

parity is enabled). The default value is 2 stop bits (and no parity bit). To change the number of Stop Bits from BASIC, use the command

POKE 1272+s, r

where r is an integer, from 1 through 127. To determine the correct number of stop bits for your external device, see the external device's operation manual.

Note: you must add the one parity bit to the Number of Stop Bits, if parity is enabled.

3. PARITY/CHECKSUM OPTIONS (assembly-listing variable: STATUS)

Memory location 1400+s (\$578+s, in hexadecimal) contains a number, the lower three bits of which determine two parity options (enable/disable and even/odd) and one checksum option (enable/disable). If the remote device with which your Serial Interface is communicating requires a parity bit to be sent or received with each character, you can tell your Serial Interface to do this task. You can also specify which type of parity check (even parity or odd parity) is to be sent and received. If your remote device requires that a checksum be sent after every 256 characters in a Batch move, you can tell the Serial Interface to send one. To decide whether your external device requires either a parity bit or a checksum character (or both), consult the device's operation manual. The three Parity/Checksum options are changeable from BASIC by using the command

POKE 1400+s, r

where r is an integer from 0 through 7. The actual value that r should be assigned is determined as follows:

- | | | |
|--------|---------------------|---------------------------------|
| Bit 0: | 1 = odd parity | (This is the least significant, |
| | 0 = even parity | or rightmost, bit.) |
| Bit 1: | 1 = no parity | (initial default value) |
| | 0 = parity enabled | |
| Bit 2: | 1 = no checksum | (initial default value) |
| | 0 = checksum enable | |

First determine whether or not a parity bit need be sent (Bit 1). If yes, then decide whether the parity should be odd or even (Bit 0). Also, determine whether or not a checksum character need be sent during Batch moves (Bit 2). For example, let's assume that an even parity bit must be sent, with no checksum. Bit 0 gets a value of 0, Bit 1 gets a value of 0, and Bit 2 gets a value 1. This binary number 100 is converted to its decimal equivalent of 4 and POKE'd (assuming slot #1):

POKE 1401, 4

4. INPUT/OUTPUT BUFFER (assembly-listing variable: BYTE)

Memory location 1656+s (\$678+s, in hexadecimal) is the input buffer for the individual character that has just been received through the Serial Interface from the external device. Assuming the Interface is in slot #1, the BASIC command

PRINT PEEK (1657)

will print on the APPLE's TV screen the ASCII value of the character just received.

5. LINE WIDTH (assembly-listing variable: PWIDTH)

Memory location 1784+s (\$6F8+s, in hexadecimal) contains the "Printer Width," or number of characters per line. After transmitting this number of characters, the Serial Interface will then transmit its Carriage-Return sequence. To change the number of characters per line, from BASIC, use the command

POKE 1784+s, r

where r is an integer, from 0 through 255, specifying the number of characters per output line. To determine the maximum line width for your external device, consult the device's operation manual.

Note: if r is set to zero, the Serial Interface will not force *any* carriage returns to be transmitted. The output characters will be transmitted in a continuous stream.

6. DATA BITS (assembly-listing variable: NBITS)

Memory location 1912+s (\$778+s, in hexadecimal) contains the number of Data Bits, plus one for the start bit. In the APPLE, data is handled in groups containing eight bits. If you are communicating with an external device which also handles data in eight-bit groups, the default Number of Data Bits is perfect (8 data bits plus 1 start bit). However, if your external device handles data in groups of fewer than eight bits, you must set the Serial Interface to send and receive these smaller data groups.

When *receiving* data groups of fewer than eight bits, the Serial Interface will supply 1's to fill the remaining high-order bits of each eight-bit group in APPLE's memory. Similarly, when the Serial Interface is *transmitting* data groups of fewer than eight bits, the unused high-order bits in each of the APPLE's eight-bit data groups must be set to 1's.

To change the Number of Data Bits from BASIC, use
POKE 1912+s, r

where r is an integer, from 3 (2 data bits plus one start bit) through 9 (8 data bits plus one start bit).

Note: to calculate *r*, you must add one start bit to the number of data bits. If *r* is set to less than the default value of 9 (8 data bits plus one start bit), you must set the unused high-order data bits to *ones* before transmitting the data. Received data will also have unused high-order data bits set to *ones*.

Example: Binary Coded Decimal is a code for sending numbers in four-bit data groups. The BCD code for the number 7 is 0111. If the Number of Data Bits, *r*, is set to 5 (4 data bits plus 1 start bit), BCD for the number 7 must be stored in the APPLE's eight-bit byte as 11110111 before the data group 0111 can be transmitted. Similarly, if the data group 0111 is received by the Serial Interface, it will be stored in the APPLE's eight-bit byte as 11110111.

7. OPERATION MODES (assembly-listing variable: FLAGS)

Memory location $2040+s$ (\$7F8+s, in hexadecimal) contains a number, four of whose bits determine four separate modes of operation. To alter the operation modes from BASIC, use the command

POKE 2040+s, r

where the value of *r* is determined by use of the following table:

r's Binary Bit	(Decimal Equiv., If Bit=1)	Operation Set By Bit Value	Default
Bit #0	(1)	1 = Line feed after carriage return 0 = No line feed	(Set by Lever 7)
Bit #5	(32)	1 = Lower-case input enable 0 = Convert lower-case to Upper-case	(Permanent Default)
Bit #6	(64)	1 = No delay after carriage return 0 = Carriage return delay enable	(Set by Lever 7)
Bit #7	(128)	1 = No display on APPLE's TV 0 = APPLE's display enabled	(Set by Levers 5&6)*





*APPLE's TV display is only enabled during initialization if DIP switch levers 5 and 6 are both On.

For example, let us assume that you wish to have line feeds, upper-case only, carriage return delay, and no APPLE display. This would require that bits 0 and 7 have a value of 1, and bits 5 and 6 have a value of 0. Add up the decimal equivalents of all of the bits that were assigned the value 1 (the decimal equivalents are the numbers in parentheses, next to

the Bit #'s). The decimal equivalents for bits 0 and 7 are 1 and 128 respectively; therefore the total of the decimal equivalents is 129. This value is assigned to *r*, and POKE'd (assuming slot #1):

POKE 2041, 129




 
If you wish to change only Bit #5 (lower-case input enable/convert), you can do so with the following commands:

  (Press and release the  key, and then type )

This changes *r*'s Bit #5 to a zero, the default value. After this command, all lower-case characters arriving through the Serial Interface from an external device will be converted to upper-case characters. Incoming upper-case characters are not affected. This is the APPLE's usual mode, so any APPLE display will look fine.

This changes *r*'s Bit #5 to a one. After this command, lower-case characters arriving through the Serial Interface from an external device will be stored as lower-case characters in APPLE's memory. Upper-case characters are not affected. Since the APPLE was designed for upper-case characters only (BASIC will accept lower-case characters only in quoted strings), any APPLE *display* of these lower-case characters will look strange on the TV screen. See the previous section for details. However, the characters are *stored* correctly, and may be printed correctly on any appropriate external device.

Note: the commands   and   are Serial Interface *input* commands. They will have no effect unless the Interface has been initialized for input (by IN#1, for instance).

8. TAB

The TAB and comma functions in Integer BASIC (HTAB in APPLESOFT) will sometimes work in conjunction with the Serial Interface, but have several restrictions (fewest for comma-tabbing). A TAB of less than 18, if it would end directly on a character already printed, may be simply tabbed from that character's position. No TAB can cause printing to occur to the *left* of the last printed character on the current line. An attempt to do so usually causes printing to occur in the first available position to the *right* of the last printed character. Both Integer BASIC's TAB and APPLESOFT's HTAB send out a carriage return for every 40 positions in the tab instruction, and then tab the remaining positions. For tabbing to any position (including those beyond position 40), you can use the BASIC command

POKE 36, r

where *r* is an integer, from 0 through 255, equal to the number of print

positions to be tabbed. This command suffers most of TAB's restrictions, except for the 40-position limit. In APPLESOFT, the TAB function (used inside a PRINT statement) can also cause tabbing of more than 40 positions.

V DIRECT USE OF THE INTERFACE

TRANSMITTING A CHARACTER WITHOUT USING PR#1

Occasionally, it is useful to send a character out through the Interface *without* using a PR# command to change the "output vector" (the system pointer that tells your APPLE where to send its output, normally to its TV screen). To use the Serial Interface *directly*, follow these two steps:

1. Into APPLE's accumulator, put the ASCII code of the character to be sent.
2. CALL -16384 + (256 * s)

where s is the Interface's slot number (the equivalent hexadecimal location to CALL is \$Cs00). There are various ways to get a number into the APPLE's accumulator, but one way is to write a very small machine-language subroutine to do it, and then CALL that subroutine from your BASIC program. To begin, press the **RESET** key to enter the Monitor (prompt character: *), and then (assuming slot #1) type

300: A9 11 4C 00 C1 **RETURN**

Check your work by typing

300L

Ignoring most of the resulting display, the first two lines should look like this:

0300-	A9 11	LDA	#\$11
0302-	4C 00 C1	JMP	\$C100

The first instruction (at hexadecimal location \$300) tells the APPLE to **Load** the Accumulator with the number in the next location (hexadecimal location \$301). For now, that number is \$11. The second instruction is equivalent to CALL -16128 in BASIC: it tells the APPLE to **Jump** to hexadecimal location \$C100, which starts the Serial Interface character output routine. To use this subroutine in your BASIC program, you must first put into hexadecimal location \$301 (that's location 769, in decimal) the ASCII code for the character you want the Serial Interface to send out. Then you will CALL the subroutine at hexadecimal location \$300 (768, in decimal). Here is a short program that uses the above machine-language routine to send out one character at a time:

```
10 INPUT "LETTER?", L$
20 POKE 769, ASC(L$)
30 CALL 768
40 GOTO 10
```

BATCH MOVES

At times it is useful to send or receive large amounts of information very quickly. This can be accomplished through use of a *Batch Move*. The Batch subroutines are "utility" routines. They are intended to be used for special

applications such as Data Collection, Mass Storage and Retrieval Systems, and sending program sequences to control external devices. To understand how to use the Batch routines on the simplest level, refer to the examples below. For an example of using the Batch Moves from BASIC, see the next section, BATCH MOVES FROM BASIC.

Note: before using the Batch routines, you must have initialized the Serial Interface (by typing PR#1, for instance) and you must have set the desired parity and checksum parameters. The Batch Move commands deal directly with the Serial Interface (not through the input and output "vectors" set by IN# and PR#); therefore these commands are the same, regardless of which slot contains the Interface card.

1. Batch Output

When in the Monitor (prompt character: *), type

3F8: 4C 41 C9 **CTRL**

This prepares the APPLE to jump to hexadecimal location \$C941 in the

CTRL

Serial Interface's Read-Only Memory when a **Y** is typed on the keyboard. This jump causes the Batch Output routine to execute. When you are ready to actually send the data, type

CTRL

addr1 . addr2 **Y** **RETURN**

where "addr1" is the hexadecimal starting address of the data, and "addr2" is the hexadecimal ending address of the data. For example, if we wanted to send the information that is stored in memory from address \$2000 through address \$3FFF, we would type

CTRL

2000.3FFF **Y** **RETURN**

As soon as the return is typed, the data from address 2000 to address 3FFF will be sent through the Serial Interface from the APPLE to the external receiving device.

2. Batch Input

When in the Monitor, type

3F8: 4C 3D C9 **CTRL**

This prepares the APPLE to jump to hexadecimal location \$C93D in the Serial Interface's Read-Only Memory when a control Y is typed on the keyboard. This jump causes the Batch Input routine to execute. When you are ready to actually receive the data, type

CTRL

addr1 . addr2 **Y** **RETURN**

where "addr1" is the hexadecimal starting address in which the incoming data will be stored, and "addr2" is the hexadecimal ending address in which the incoming data will be stored. For example, if we wanted to receive data from an external device, and store it in our APPLE's memory from address \$4000 through address \$5FFF, we would type

CTRL

4000.5FFF **Y** **RETURN**

As soon as return is typed, the serial data can be sent by the external transmitting device to the Serial Interface. As it is received, the incoming data will be stored in your APPLE's memory from address 4000 through address 5FFF.

Note: when the Serial Interface is instructed to receive a batch move, the cursor on the receiving APPLE's TV screen disappears, and the Interface waits patiently until *all* the specified locations have been filled with received data. Then the cursor returns.

BATCH MOVES FROM BASIC

While it is easiest to use the Batch routines from the Monitor, it is also possible to do Batch Moves from BASIC. In the following discussion these definitions will hold:

- BAL = Beginning Address Low
(the two rightmost digits of the 4-digit hexadecimal starting address for the move, converted to decimal)
- BAH = Beginning Address High
(the two leftmost digits of the 4-digit hexadecimal starting address for the move, converted to decimal)
- EAL = Ending Address Low
(the two rightmost digits of the 4-digit hexadecimal ending address for the move, converted to decimal)
- EAH = Ending Address High
(the two leftmost digits of the 4-digit hexadecimal ending address for the move, converted to decimal)

Suppose you wish to send someone a picture from your APPLE's high-resolution screen (page 1). The memory for this screen lies between 8K and 16K, from hexadecimal address \$2000 to hexadecimal address \$4000. For the Beginning Address \$2000:

BAL = \$00 (hex) = 0 (decimal)

BAH = \$20 (hex) = 32 (decimal)

For the Ending Address \$4000:

EAL = \$00 (hex) = 0 (decimal)

EAH = \$40 (hex) = 64 (decimal)

1. Batch Output from BASIC

The following BASIC program does the same task that the Monitor Batch Output command did. See the discussion of the Monitor Batch Output for more details.

```
10 PR#1 : PRINT " "           (initializes Interface)
20 POKE 60, BAL : POKE 61, BAH (sets starting address)
30 POKE 62, EAL : POKE 63, EAH (sets ending address)
40 CALL -14015                (jumps to Output Routine at $C941)
50 PR#0                       (returns to normal TV output)
60 END
```

2. Batch Input from BASIC

In the Batch Output program, above, change line 40 to
40 CALL -14019 (jumps to Input Routine at \$C93D)

The resulting BASIC program does the same task that the Monitor Batch Input command did. See the Monitor Batch Input discussion for more details. Note that the IN#1 is *not* necessary for accepting input through the Serial Interface, because CALL -14019 deals directly with the interface (not through the input and output "vectors" set by PR# and IN#). In fact the PR#1 in line 10 was necessary *only* to initialize the interface;

10 CALL -16128
would have done as well.

VI APPENDIX: SERIAL INTERFACE TIMING

TABLE OF BAUD RATE QUANTUM NUMBERS

The following is a table that gives seventeen of the most commonly used **baud** rates, along with their quantum value (for POKEing) and percent error. Although only seventeen different **baud** rates are shown here, any integer from 0 through 255 may be POKE'd into the proper address (1144+s), and each will give a different **baud** rate.

Average APPLE II Frequency 1.0204842 MHz
Period .979926 microseconds
Jitter +139.7 nanoseconds every 65th cycle

Baud Rate Loop Quantum** 53 APPLE II Cycles (51.94 microseconds)

Baud Rate	Quantum No. (Hex)	(Dec)	Period (microsec.)	Actual Baud Rate	% Error
75	\$ 00	*** 0	13296	75.20	+ .28
90	\$ D6	214	11115	89.96	- .037
110*	\$ B0	176	9141	109.4	- .548
134.5*	\$ 90	144	7479	133.7	- .586
150	\$ 80	128	6648	150.4	+ .28
240	\$ 50	80	4155	240.67	+ .28
300*	\$ 40	64	3324	300.85	+ .28
450	\$ 2B	43	2234	447.74	- .51
600	\$ 20	32	1662	601.7	+ .28
900	\$ 15	21	1091	916.8	+1.86
1200*	\$ 10	16	831	1203.4	+ .28
1800	\$ 0B	11	571.3	1750.2	-2.78
2400*	\$ 8	8	415.5	2406.8	+ .28
3600	\$ 5	5	259.7	3850.59	+6.96
4800*	\$ 4	4	207.7	4813.6	+ .28
9600*	\$ 2	2	103.9	9627.2	+ .28
19200*	\$ 1	1	51.9	19254.4	+ .28

* DIP switch selectable

$$** \text{Quantum} = \frac{1}{(.00005194) * \text{Baud Rate}}$$

*** The quantum number zero is treated as 256 (\$100).


```

3450 PLA A
3460 ROL A
3470 AND #3 ; DETERMINE WHICH COLUMN WIDTH
3480 TAY ;
3490 DAY ; TRANSFER D-3 TO Y
3500 STA FWDTH,X ; GET WIDTH FROM TABLE
3510 LDA #4 ; ISSUE COLUMN WIDTH, ONE STOP
3520 STA STFBITS,X ; SET THE NUMBER OF STFBITS
3530 LDA #4 ; AND THE DATA BITS
3540 STA NRITS,X
3550 LDA #4 ; LAST, THE PARITY STATUS
3560 STA STATUS,X
3570 CPX $WH ;
3580 BNE NOTOUT ; SET CHARACTER OUT VECTOR
3590 CMP CSWL ; OR...
3600 BEQ NOTOUT
3610 STA CSWL
3620 CLC ; INDICATE OUTPUT)
3630 RRC ;
3640 NOTOUT ; SET KEY IN VECTOR.
3650 CPX $SWH
3660 PNE NOTINF
3670 LDA #0SERIN
3680 STA RSWL ; (INDICATE INPUT)
3690 PARERR RTS
3700 GOODDATA RTS
3710 PAGE
3720 ;
3730 ; * * * * *
3740 ; THIS IS THE SERIAL INPUT ROUTINE. ON ENTRY X=6CN.
3750 ; REGISTERS A & Y MAY BE ANYTHING. BRATE (+%CN) MUST
3760 ; CONTAIN THE SERIAL RATE NUMBER. NRITS (+%CN) MUST CONTAIN
3770 ; THE NUMBER OF BITS (INCLUDING THE START BIT). ONE STOP
3780 ; BIT IS ASSUMED. #ND MUST BE IN 'ND' (+%CN). BIT 1 OF
3790 ; FLAGS INDICATES PARITY OPTION. I1=NO PARITY, D=PARITY.
3800 ; IF PARITY IS SELECTED, BIT 0 OF FLAGS INDICATES ODD OR
3810 ; EVEN PARITY (0=EVEN PARITY, 1=ODD PARITY).
3820 ; ON EXIT DATA IS IN BYTE (+%CN) (NOTE: FOR LESS THAN 8
3830 ; BITS, THE REMAINING HIGH ORDER BITS ARE SET TO ONE, I.E.
3840 ; IF NUMBER OF BITS IS SET TO 6, ONE START BIT AND 5 DATA.
3850 ; THE RETURNED DATA WILL BE 11XXXXXX BINARY.).
3860 ; X=%CN, AND Y=D. IF THE ROUTINE WAS INTERRUPTED BY THE
3870 ; KEYBOARD OR THERE WAS A PARITY ERROR, THE CARRY FLAG IS
3880 ; SET. ON ERROR OR KEYSTROKE! X=%CN, A & Y ARE UNDEFINED.
3890 ; * * * * *
3900 ;
3910 SHFTIN SEI ; NO HARD INTERRUPTIONS, PLEASE
3920 LDA STATUS,X ; PREPARE FOR PARITY/STOP BIT OPTIONS
3930 AND #3 ; IF BIT ONE IS ZERO THEN PARITY, IF BIT ZERO IS
3940 ROR PARITY ; ZERO THEN EVEN PARITY
3950 PHA ; INITIALIZE PARITY
3960 PHA NRITS,X ; IF A=0 THEN PARITY IS EXPECTED
3970 STA A ;
3980 LDA A ;
3990 LDY A ; INITIALIZE BIT COUNT
4000 SEC ;
4010 ROL ; SET CARRY FOR START BIT
4020 NEXTIN LDY HO ; BRANCH ALWAYS
4030 DFC NCOUHT ; ARE ALL THE BITS IN YET?
4040 BEQ CHMPAR ; YES, GET PARITY/STOP BIT...
4050 CLC ; NO, MORE TO COME
4060 GETBIT LDA DEV,Y ; BRANCH IF DATA
4070 RRC ; BRANCH IF START BIT
4080 ROR ;
4090 LDA #0 ; MAYBE THE KEYBOARD WANTS ATTENTION
4100 BEQ GETBIT ; (NO, WAIT FOR THE START BIT
4110 STA A ;
4120 RIT ;
4130 FLA ; CLEAR KEYBOARD
4140 RTS ; YES, PEEK! FIX THE STACK BEFORE RETURN
4150 ; THE KEYBOARD INTERRUPTED THE INPUT!
4160 ;
4170 ;
4180 GOTSTRY LDA BRATE,X ; MUST CREATE A DELAY SUCH THAT DATA IS TAKEN
4190 LDY #19 ; ( AT THE CENTER OF THE SIGNAL.(BRANCH ALWAYS)
4200 SWAIT BNE SWAIT ;
4210 SEC #11 ; (DOE WAITING AROUND?
4220 PED NEXTIN ; YES, IT'S GET THAT DATA TIME
4230 LDY #0 ; NO, WAIT ANOTHER 78 CYCLE TIMES
4240 BNE SWAIT ; BRANCH ALWAYS
4250 ;
4260 ;
4270 SAVBIT TAY ;
4280 ROL A ; SHIFT THE DATA INTO CARRY
4290 ROR RYTE,X ; THEN PUT IT AWAY.
4300 TYA ;
4310 EOR PARITY ; UPDATE THE PARITY
4320 STA PARITY ;
4330 STA PRATE,X ; GET THE BAUD DELAY NUMBER
4340 SEC ;
4350 WAIT1 SEC #11 ; TIME OUT THE BAUD RATE
4360 BEQ HXTIN ; BRANCH IF DONE
4370 LDY #19 ;
4380 BNE WAIT153 ; OFLAY=53*(BRATE-1) CYCLES
4390 BEQ WAIT1 ;
4400 ;
4410 ;
4420 CHKPAR PLA ; PARITY OR NO PARITY. THAT IS THE QUESTION
4430 BNE MOO ; BRANCH IF NO PARITY
4440 LDA DEV,Y ; GET THE PARITY BIT
4450 ROR PARITY ; DOES THE ONE SENT MATCH THE CALCULATED?
4460 BNE PARERR ; NOT IF THE PLUS FLAG IS ON
4470 MOD LDA DEV,Y ; MAKE SURE THE SIGNAL IS HIGH BEFORE
4480 RPL MOO ; RETURNING...
4490 LDA #4 ;
4500 SRC NRITS,X ; HOW MANY BITS TO MAKE A WHOLE BYTE?
4510 TAY ; PUT THE LEFTOVER BIT COUNT IN REGISTER-Y
4520 BNE OYE ; SHIFT IN A ONE?
4530 MOD1 BEQ GOODDATA ; YES, SEND THE DATA BACK TO CALLER
4540 ROR RYTE,X ; YES, MAKE THE HIGH ORDER BIT A ONE.
4550 SEC ;
4560 MOO1 ; BRANCH ALWAYS
4570 ;
4580 ;
4590 ;
4600 ; THE FOLLOWING ARE VARIOUS EXIT ROUTINES.
4610 ;
4620 ;
4630 VIDEO PLA ;
4640 TAY ;
4650 PLA ; RESTORE ALL REGISTERS
4660 TAY ;

```

```

0001 2710 1
0002 2720 1
0003 2730 MOVIN JSR SHIIN :SET THE INPUT
0004 2740 1 PM1 HERE
0005 2750 1 LDA RTH,Y
0006 2760 1 STA (RTH),Y :PUT THE INPUT AWAY
0007 2770 1 EDR CKSUM
0008 2780 1 STA CKSUM :INDATE THE CKSUM
0009 2790 1 JSR INITAI :INCKEAFNE RAN FOINIEK
0010 2800 1 RES FINISH
0011 2810 1 INC COUNT :INDATE THE BYTE COUNT
0012 2820 1 BNE MOVIN :BRANCH IF BLOCK NOT FILLED
0013 2830 1 PM1
0014 2840 1 BCS BATCH :BRANCH IF NO CHECKSUM
0015 2850 1 JSR SHIIN :GET THE CHECKSUM INPUT
0016 2860 1 LDA BYTE,X
0017 2870 1 CKSUM
0018 2880 1 CLC :INDICATE CHECKSUM MODE
0019 2890 1 BEQ BATCH
0020 2900 1 BNE
0021 2910 1 CLC
0022 2920 1 ERR1 :INDICATE ERROR CONDITION
0023 2930 1 BCC FINISH :BRANCH ALWAYS TAKEN
0024 2940 1 PM1
0025 2950 1 PAGE
0026 2960 1
0027 2970 1
0028 2980 1
0029 2990 1
0030 3000 1
0031 3010 1
0032 3020 1
0033 3030 1
0034 3040 1
0035 3050 1
0036 3060 1
0037 3070 1
0038 3080 1
0039 3090 1
0040 3100 1
0041 3110 1
0042 3120 1
0043 3130 1
0044 3140 1
0045 3150 1
0046 3160 1
0047 3170 1
0048 3180 1
0049 3190 1
0050 3200 1
0051 3210 1
0052 3220 1
0053 3230 1
0054 3240 1
0055 3250 1
0056 3260 1
0057 3270 1
0058 3280 1
0059 3290 1
0060 3300 1
0061 3310 1
0062 3320 1
0063 3330 1
0064 3340 1
0065 3350 1
0066 3360 1
0067 3370 1
0068 3380 1
0069 3390 1
0070 3400 1
0071 3410 1
0072 3420 1
0073 3430 1
0074 3440 1
0075 3450 1
0076 3460 1
0077 3470 1
0078 3480 1
0079 3490 1
0080 3500 1
0081 3510 1
0082 3520 1
0083 3530 1
0084 3540 1
0085 3550 1
0086 3560 1
0087 3570 1
0088 3580 1
0089 3590 1
0090 3600 1
0091 3610 1
0092 3620 1
0093 3630 1
0094 3640 1
0095 3650 1
0096 3660 1
0097 3670 1
0098 3680 1
0099 3690 1
0100 3700 1
0101 3710 1
0102 3720 1
0103 3730 1
0104 3740 1
0105 3750 1
0106 3760 1
0107 3770 1
0108 3780 1
0109 3790 1
0110 3800 1
0111 3810 1
0112 3820 1
0113 3830 1
0114 3840 1
0115 3850 1
0116 3860 1
0117 3870 1
0118 3880 1
0119 3890 1
0120 3900 1
0121 3910 1
0122 3920 1
0123 3930 1
0124 3940 1
0125 3950 1
0126 3960 1
0127 3970 1
0128 3980 1
0129 3990 1
0130 4000 1
0131 4010 1
0132 4020 1
0133 4030 1
0134 4040 1
0135 4050 1
0136 4060 1
0137 4070 1
0138 4080 1
0139 4090 1
0140 4100 1
0141 4110 1
0142 4120 1
0143 4130 1
0144 4140 1
0145 4150 1
0146 4160 1
0147 4170 1
0148 4180 1
0149 4190 1
0150 4200 1
0151 4210 1
0152 4220 1
0153 4230 1
0154 4240 1
0155 4250 1
0156 4260 1
0157 4270 1
0158 4280 1
0159 4290 1
0160 4300 1
0161 4310 1
0162 4320 1
0163 4330 1
0164 4340 1
0165 4350 1
0166 4360 1
0167 4370 1
0168 4380 1
0169 4390 1
0170 4400 1
0171 4410 1
0172 4420 1
0173 4430 1
0174 4440 1
0175 4450 1
0176 4460 1
0177 4470 1
0178 4480 1
0179 4490 1
0180 4500 1
0181 4510 1
0182 4520 1
0183 4530 1
0184 4540 1
0185 4550 1
0186 4560 1
0187 4570 1
0188 4580 1
0189 4590 1
0190 4600 1
0191 4610 1
0192 4620 1
0193 4630 1
0194 4640 1
0195 4650 1
0196 4660 1
0197 4670 1
0198 4680 1
0199 4690 1
0200 4700 1
0201 4710 1
0202 4720 1
0203 4730 1
0204 4740 1
0205 4750 1
0206 4760 1
0207 4770 1
0208 4780 1
0209 4790 1
0210 4800 1
0211 4810 1
0212 4820 1
0213 4830 1
0214 4840 1
0215 4850 1
0216 4860 1
0217 4870 1
0218 4880 1
0219 4890 1
0220 4900 1
0221 4910 1
0222 4920 1
0223 4930 1
0224 4940 1
0225 4950 1
0226 4960 1
0227 4970 1
0228 4980 1
0229 4990 1
0230 5000 1
0231 5010 1
0232 5020 1
0233 5030 1
0234 5040 1
0235 5050 1
0236 5060 1
0237 5070 1
0238 5080 1
0239 5090 1
0240 5100 1
0241 5110 1
0242 5120 1
0243 5130 1
0244 5140 1
0245 5150 1
0246 5160 1
0247 5170 1
0248 5180 1
0249 5190 1
0250 5200 1
0251 5210 1
0252 5220 1
0253 5230 1
0254 5240 1
0255 5250 1
0256 5260 1
0257 5270 1
0258 5280 1
0259 5290 1
0260 5300 1
0261 5310 1
0262 5320 1
0263 5330 1
0264 5340 1
0265 5350 1
0266 5360 1
0267 5370 1
0268 5380 1
0269 5390 1
0270 5400 1
0271 5410 1
0272 5420 1
0273 5430 1
0274 5440 1
0275 5450 1
0276 5460 1
0277 5470 1
0278 5480 1
0279 5490 1
0280 5500 1
0281 5510 1
0282 5520 1
0283 5530 1
0284 5540 1
0285 5550 1
0286 5560 1
0287 5570 1
0288 5580 1
0289 5590 1
0290 5600 1
0291 5610 1
0292 5620 1
0293 5630 1
0294 5640 1
0295 5650 1
0296 5660 1
0297 5670 1
0298 5680 1
0299 5690 1
0300 5700 1
0301 5710 1
0302 5720 1
0303 5730 1
0304 5740 1
0305 5750 1
0306 5760 1
0307 5770 1
0308 5780 1
0309 5790 1
0310 5800 1
0311 5810 1
0312 5820 1
0313 5830 1
0314 5840 1
0315 5850 1
0316 5860 1
0317 5870 1
0318 5880 1
0319 5890 1
0320 5900 1
0321 5910 1
0322 5920 1
0323 5930 1
0324 5940 1
0325 5950 1
0326 5960 1
0327 5970 1
0328 5980 1
0329 5990 1

```

36